



Builders[®] FirstSource





Pine Tool Box Kit

Assembly Instructions


Side panel

(2) Required

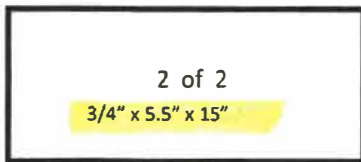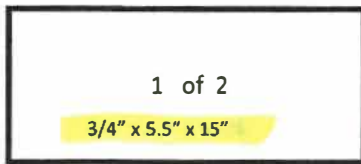


End Panels

(2) Required

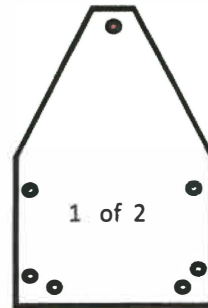


3/4" x 7.25" x 12"

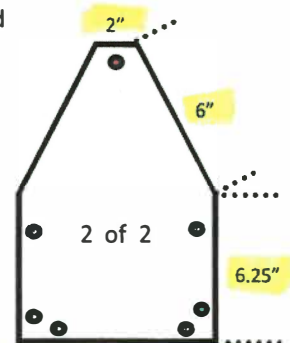

3/4" x 7.25" x 12"

Bottom Panel

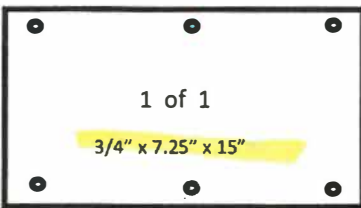

Handle Section


(1) Required



1-5/16" Dowel @ 15"


Step # 1

Place the side panels on edge
With the bottom panel on top
of them, (as shown in figure #1
Attach the bottom panel
To the side panels as shown
In figure #1, With the provided
nails In the pre-drilled holes.
(6 nails required.)

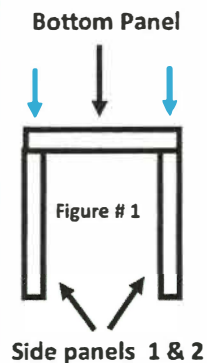

Step # 2

Stand the body of the tool box on
it's end. Then place one of the end
panels on top of it as shown in
figure # 2.
Line up all of the edges and nail it
in place. (6 nails required)
Flip the box over and repeat step.

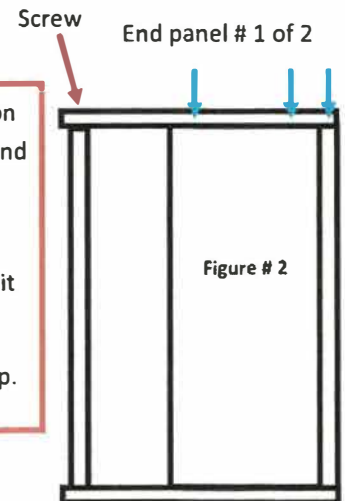

Step # 3

Place the handle in the opening of the tool box as shown,
Now attach it with the provided 1 5/8 " screws.