




Pine Tool Box Kit

Assembly Instructions


Side panel

(2) Required

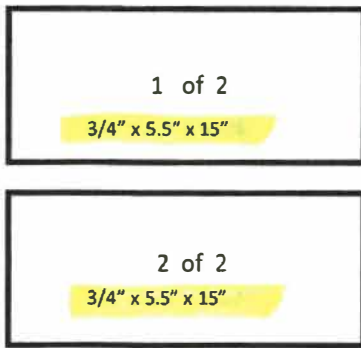


End Panels

(2) Required

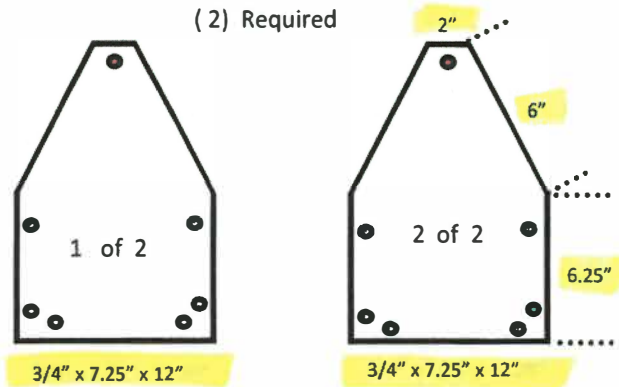

Bottom Panel

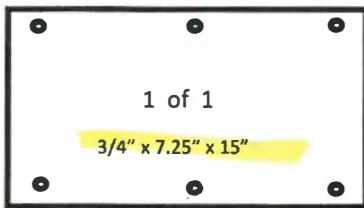


Handle Section

(1) Required




Step # 1

Place the side panels on edge
 With the bottom panel on top
 of them, (as shown in figure #1
 Attach the bottom panel
 To the side panels as shown
 In figure #1, With the provided
 nails In the pre-drilled holes.
 (6 nails required.)

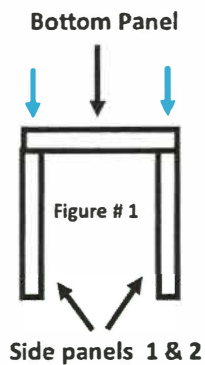

Step # 2

Stand the body of the tool box on
 it's end. Then place one of the end
 panels on top of it as shown in
 figure # 2.
 Line up all of the edges and nail it
 in place. (6 nails required)
 Flip the box over and repeat step.

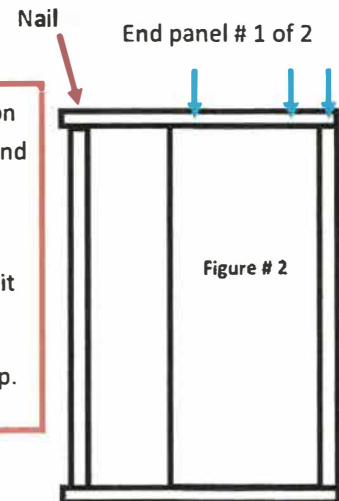

Step # 3

Place the handle in the opening of the tool box as
 shown, Now attach it with nails through the end panel.